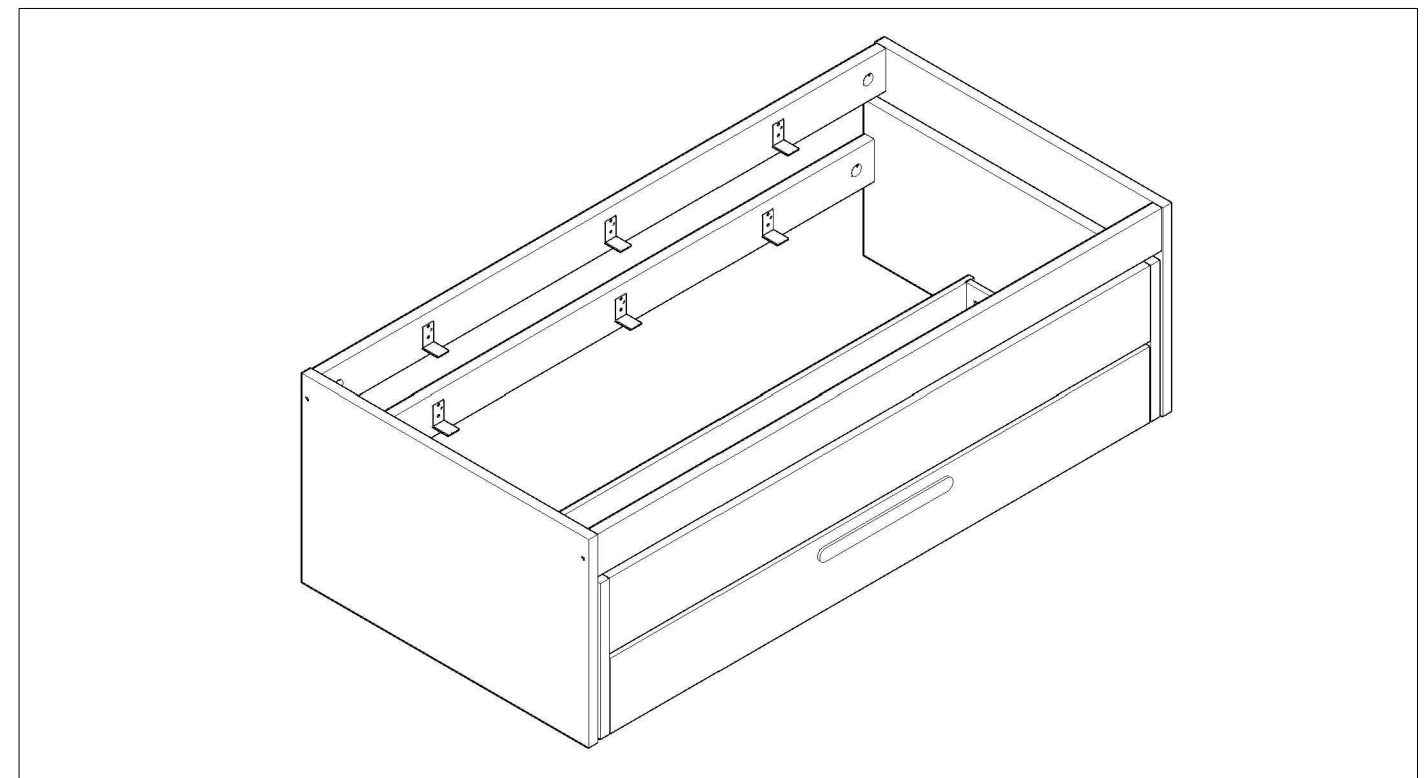


COMPACTO + CAMA + CAJONERA



ES	COMPACTO+CAMA+CAJONERA	PT	COMPACTO 1 GAVETA
FR	LIT DOUBLÉ 1 TIROIR	IT	COMPATTO 1 CASSETTI
EN	DOUBLE BED 1 DRAWER	DE	KOMPAKT 1 SCHUBLADE


1H:00MN

ES	SEGURIDAD RESPECTAR LAS INSTRUCCIONES DE MONTAJE DESCRITAS EN EL FOLLETO	PT	SEGURANCA RESPEITAR AS INSTRUÇÕES DE MONTAGEM DESCRÉVIDAS NA INSTRUÇÕES DE USO
FR	SECURITE RESPECTER LES INSTRUCTIONS DE MONTAGE DANS LA NOTICE	IT	SICUREZZA RISPETTARE LE ISTRUZIONI DI MONTAGGIO DESCRITTE NEEL'AVVERTENZA
EN	CAUTION FOLLOW CAREFULLY THE ASSEMBLING INSTRUCTIONS DESCRIBED IN THE DIRECTIONS	DE	SICHERHEITSVORSCHRIFTEN BEACHTEN SIE BITTE UNGEDINGI DIE ANGEGEBENER AUFBAUVORSCHRIFTEN

	MPATR7014		
--	------------------	--	--


COMPACTO + CAMA + CAJONERA

A	1CA9954	980 x 615 x 30	E	1CA10238	1880 x 125 x 30	I	1LA9381	584 x 125 x 16
B	1CA10237	1960 x 125 x 30	F	1CA10239	1880 x 223 x 30	J	1VA8673	584 x 125 x 16
C	1CA10243	980 x 460 x 30	G	1FR8918	1870 x 222 x 16	K	MTB2120	1830 x 596 x 3
D	1CA10244	980 x 460 x 30	H	1VA9022	1870 x 125 x 16			


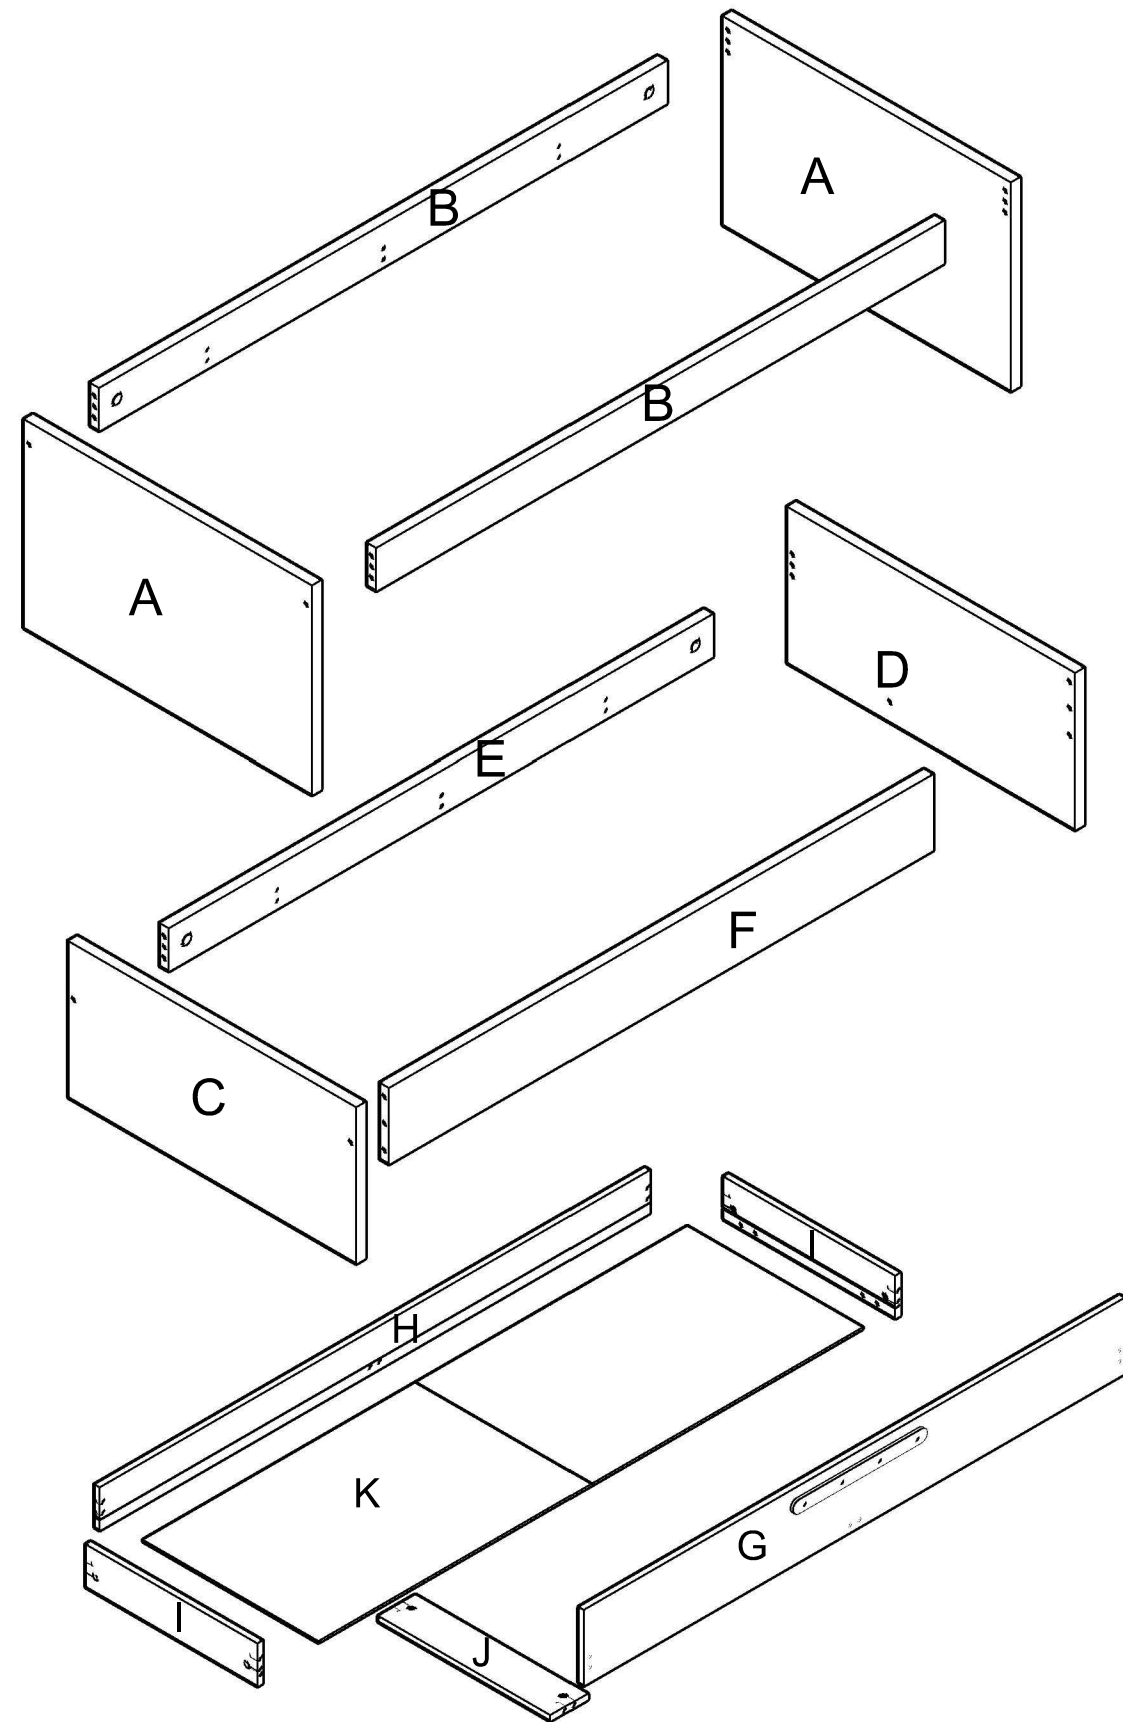


COMPACTO + CAMA + CAJONERA
















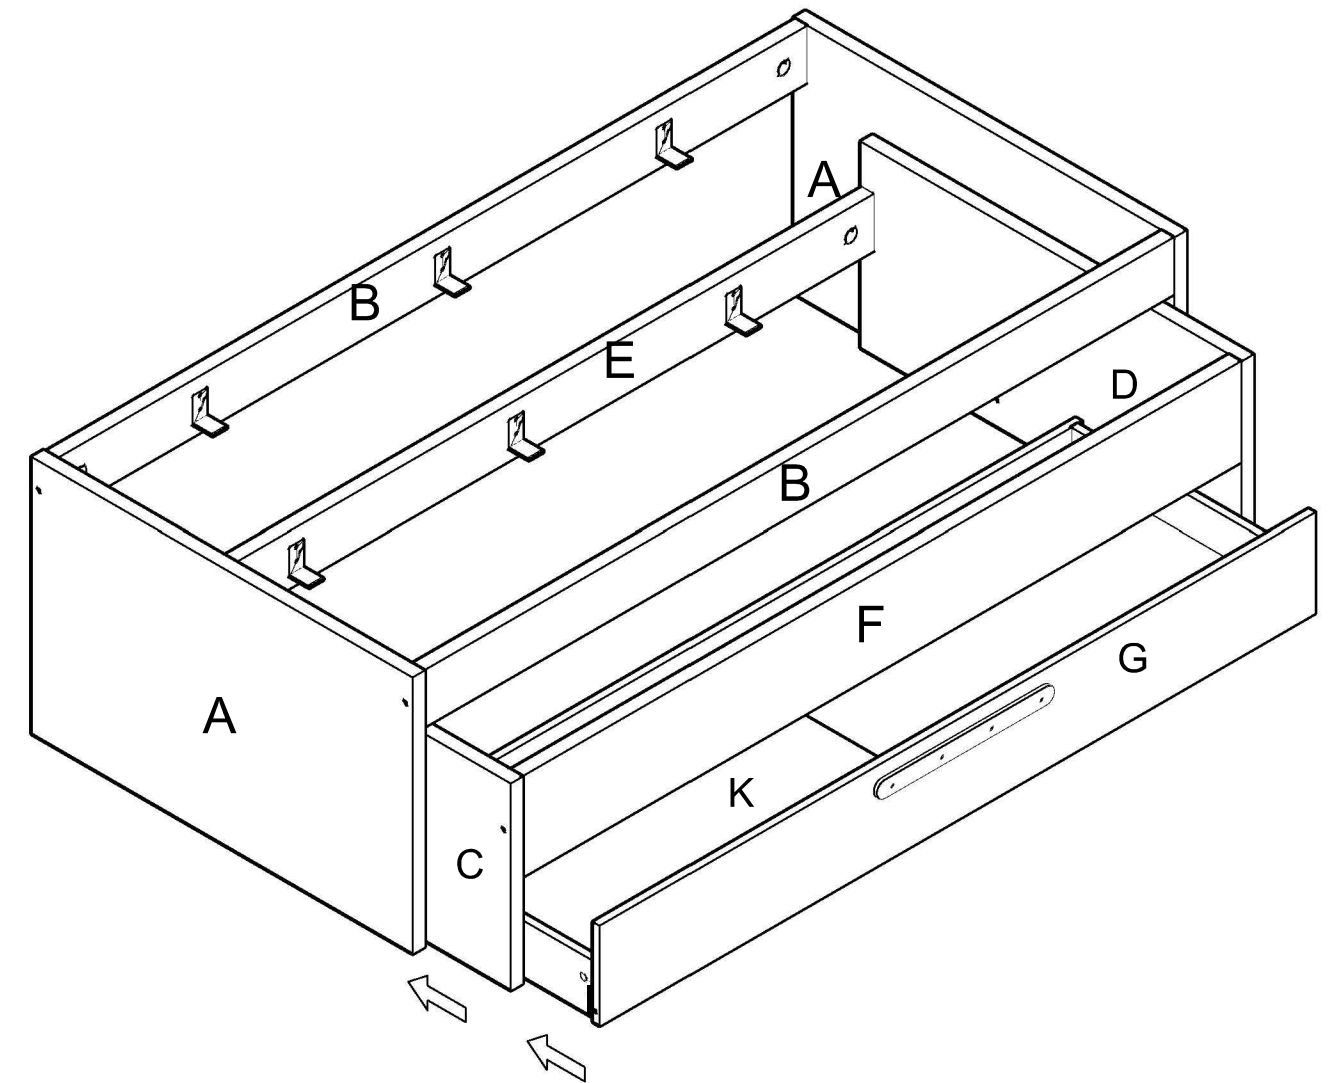
7





COMPACTO + CAMA + CAJONERA

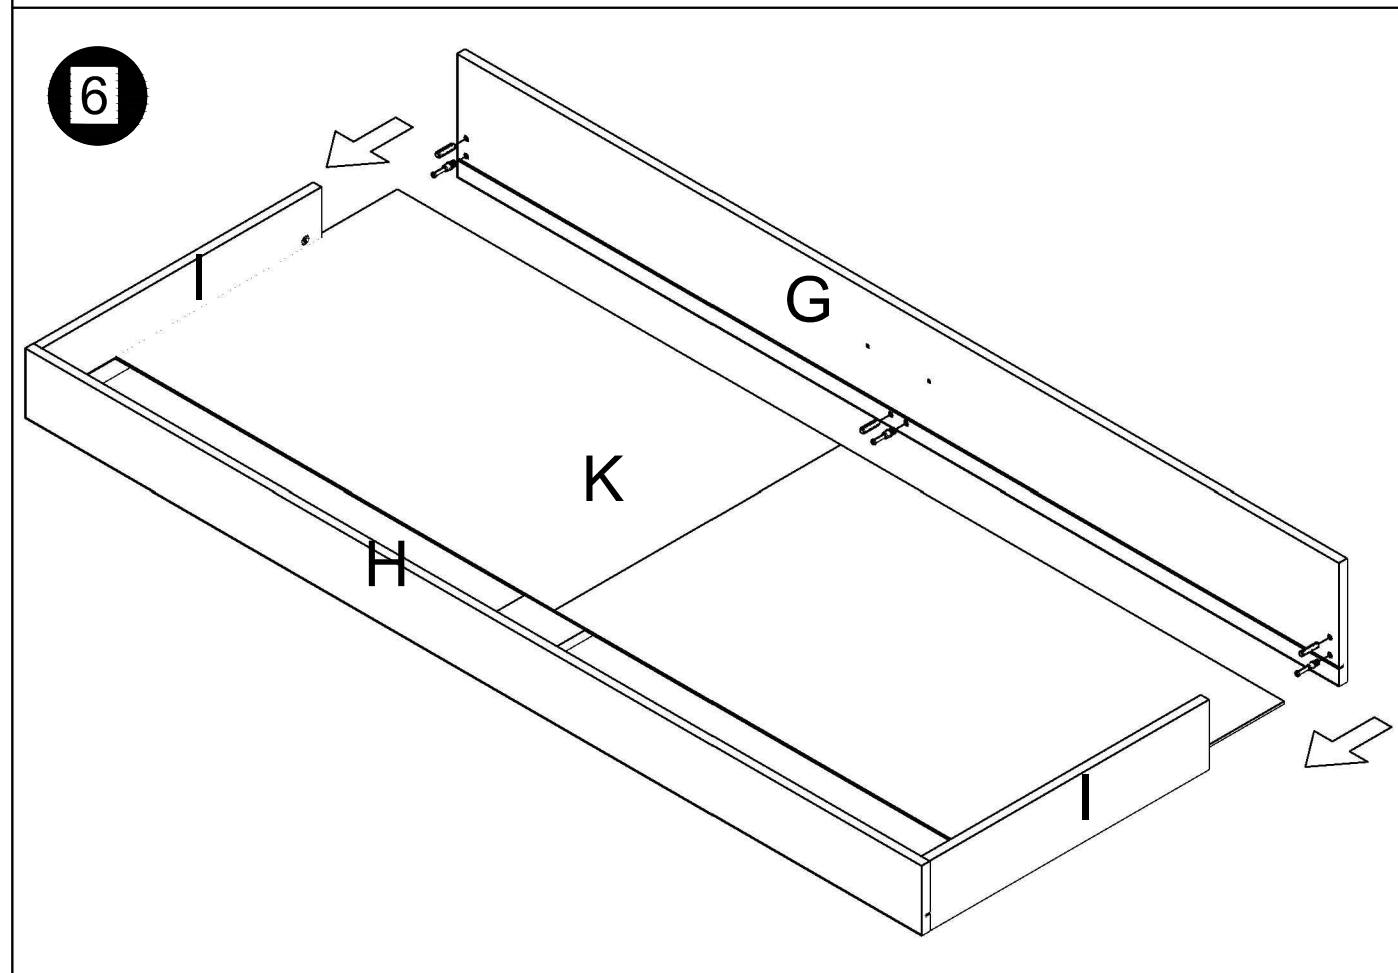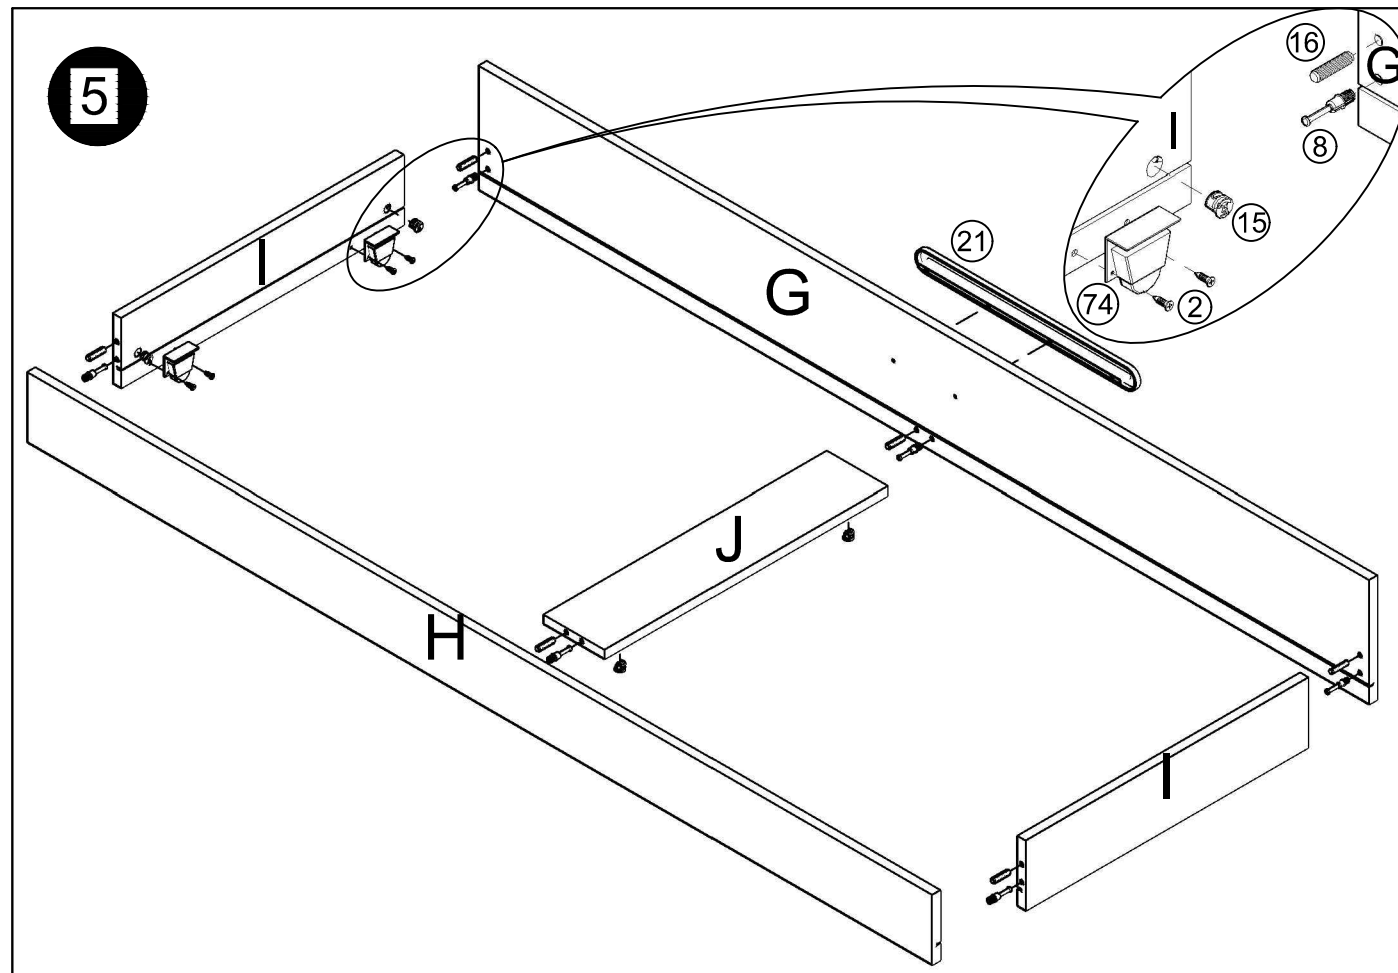

COMPACTO+CAMA + CAJONERA
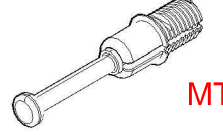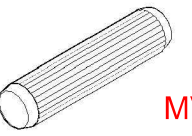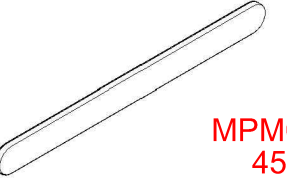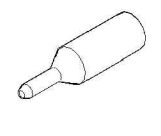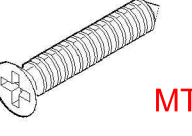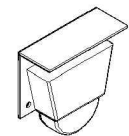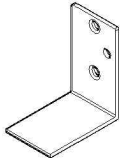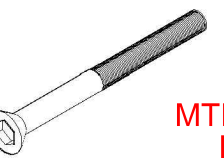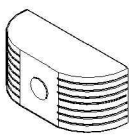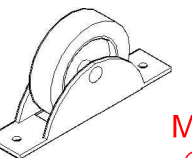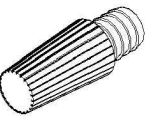
<p>②  x8 MTR0420 3,5x15</p>	<p>⑧  x6 MTR0715 8x34</p>	<p>⑮  x6 MTR0720 15x12</p>
<p>⑮  x22 MVA0090 8x30</p>	<p>⑳  x1 MPM0983 453x40</p>	<p>⑰  x4 MTA0020</p>
<p>⑳  x1 MCL0090 15 Gr</p>	<p>④③  x24 MTR0270 4X25</p>	<p>⑤①  x8 MTR0211 3,5x20</p>
<p>⑦④  x4 MRU0004 Ø30 mm</p>	<p>⑦⑧  x12 MVA2358</p>	<p>⑧①  x8 MTR0749 M8x90</p>
<p>⑧①  x8 MTR0748 M - 8</p>	<p>⑧⑤  x1 MVA1842 5 mm</p>	<p>⑬③⑥  x4 MRU0007 Ø 50 mm</p>
<p>⑬③⑦  x2 MVA1151 8-10x30</p>		

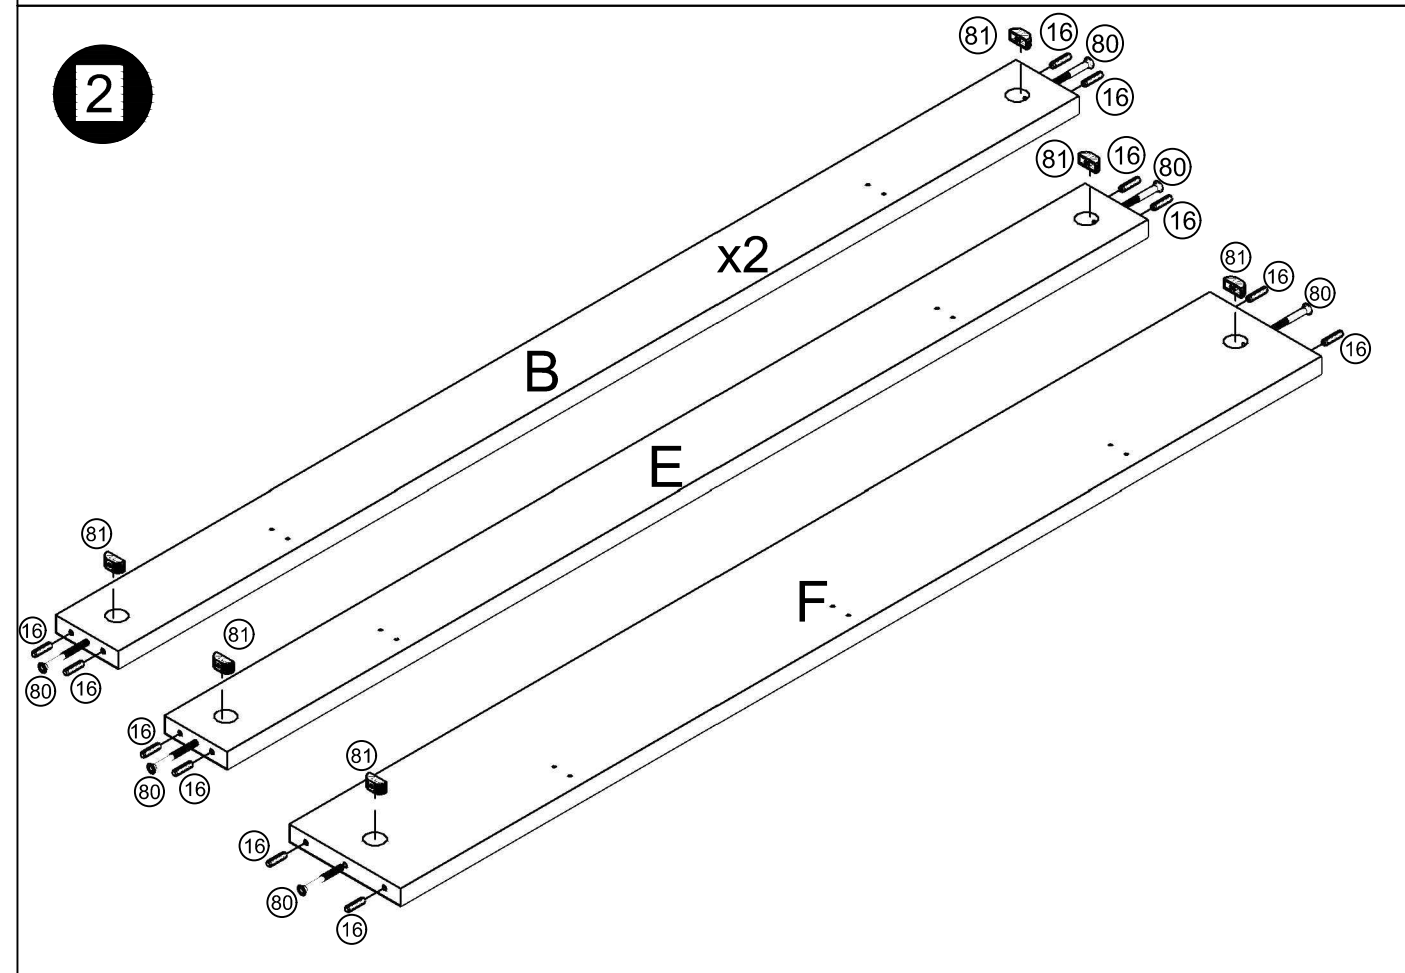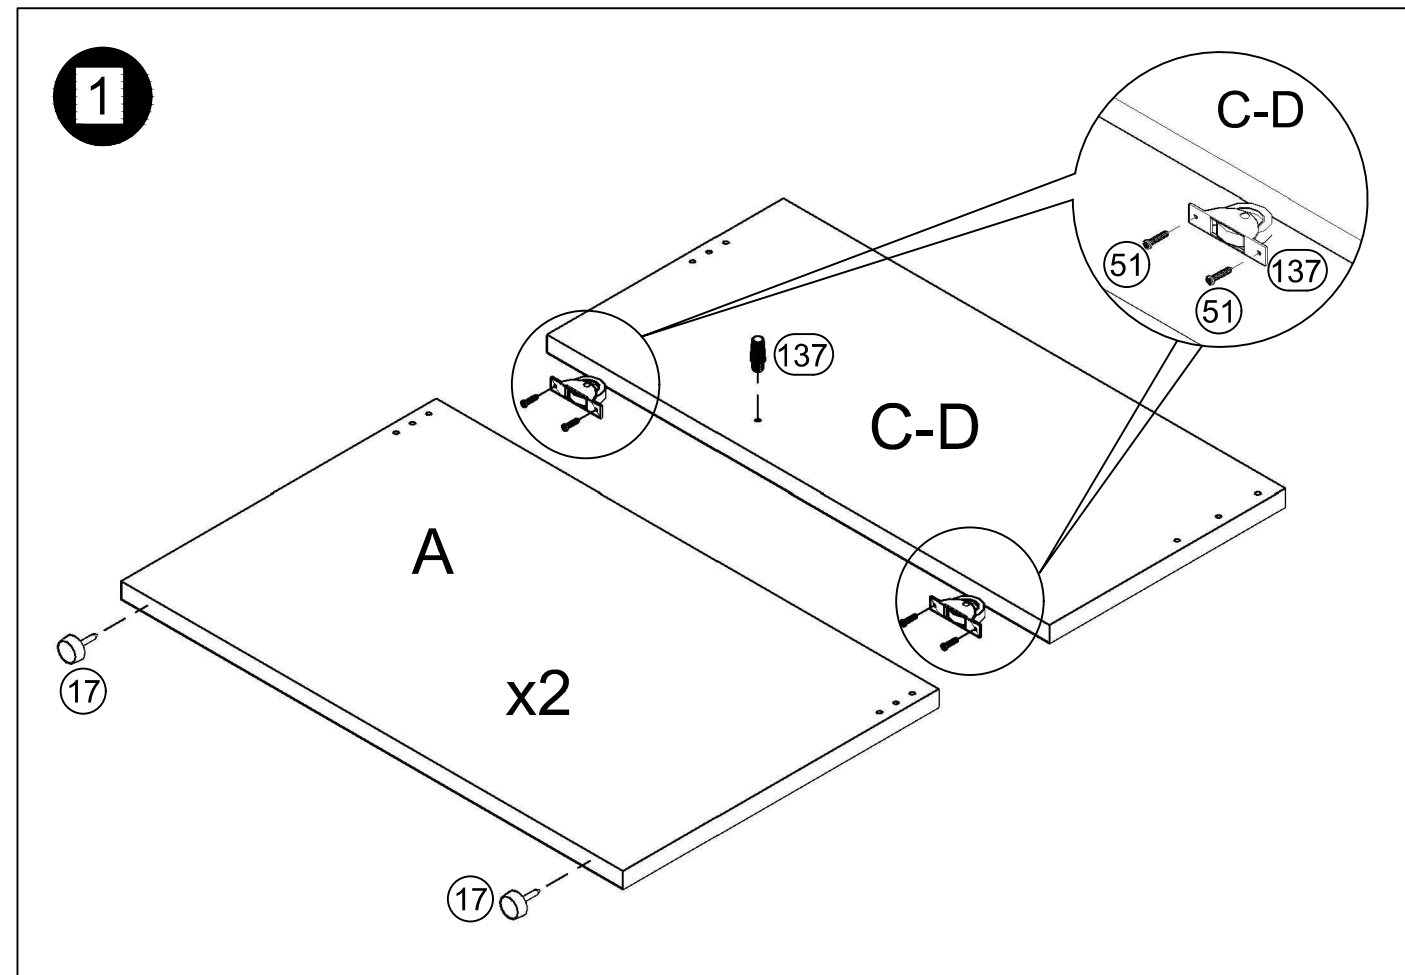COMPACTO + CAMA+ CAJONERA



COMPACTO + CAMA+ CAJONERA

